


EASY OPEN TEE ADJUSTMENT PROCEDURE

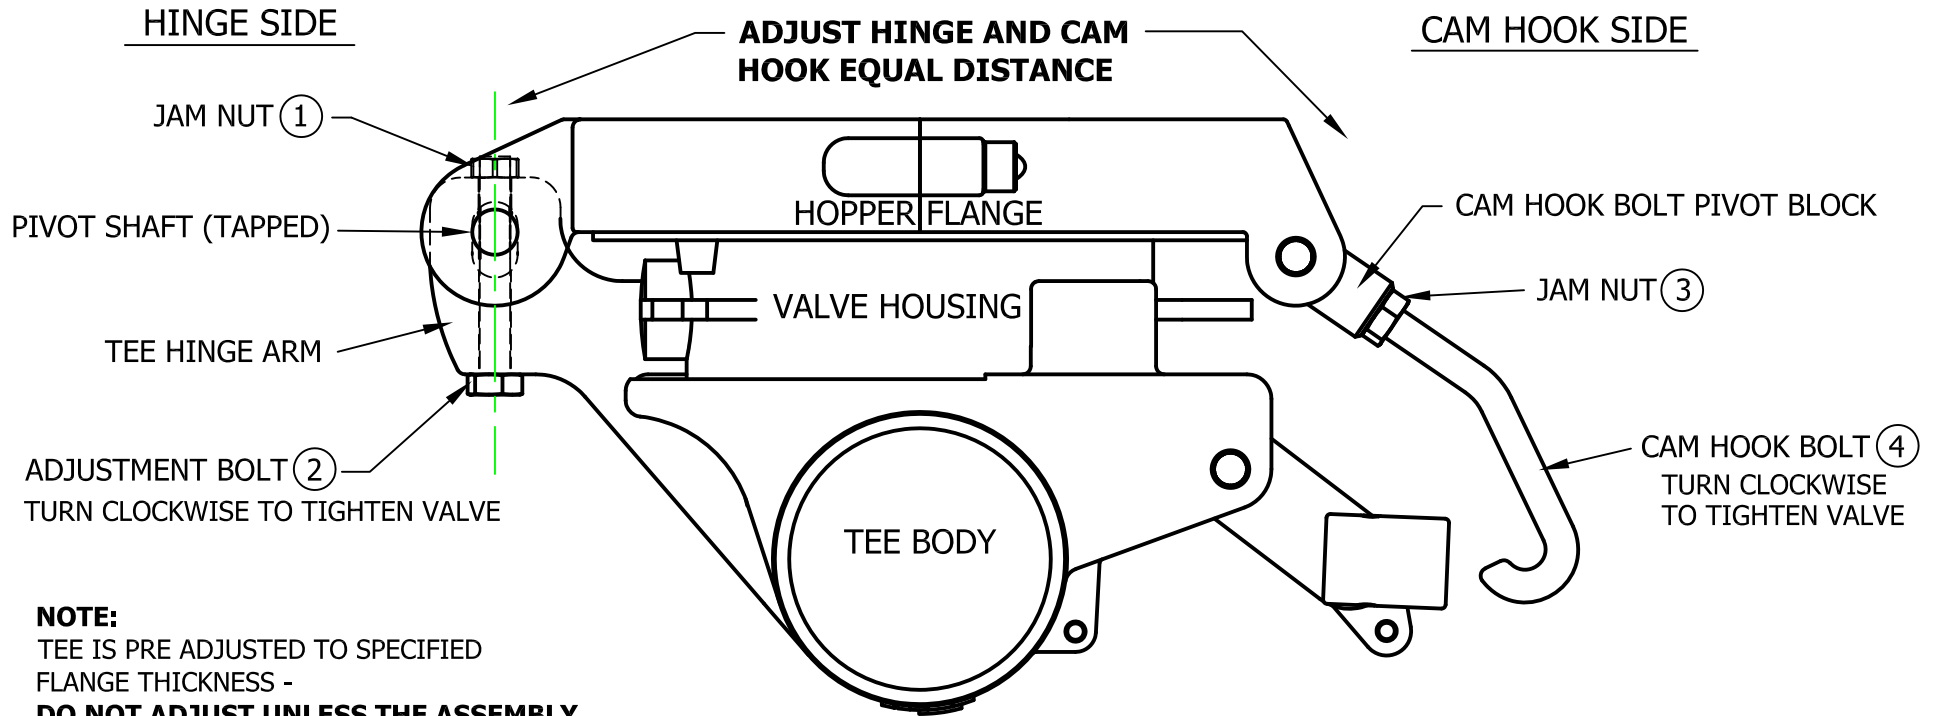


NOTE:
 TEE IS PRE ADJUSTED TO SPECIFIED
 FLANGE THICKNESS -
**DO NOT ADJUST UNLESS THE ASSEMBLY
 LEAKS OR UNABLE TO CLOSE**

TEE HINGE ADJUSTMENT PROCEDURE:


- * WITH VALVE IN PLACE AND TEE IN THE CLOSED POSITION
 LOOSEN JAM NUT (1)
- * USE 3/4" WRENCH AND TURN ADJUSTMENT BOLT (2):
 CLOCKWISE TO TIGHTEN TEE TO FLANGE
 COUNTER CLOCKWISE TO LOOSEN TEE TO FLANGE
- * TIGHTEN JAM NUT (1)

CAM HOOK BOLT ADJUSTMENT PROCEDURE:


- * WITH TEE UN-CAMMED - LOOSEN JAM NUT (3)
- * TURN HOOK BOLT (4):
 CLOCKWISE TO TIGHTEN TEE TO FLANGE
 COUNTER CLOCKWISE TO LOOSEN TEE TO FLANGE
- * TIGHTEN JAM NUT (3)

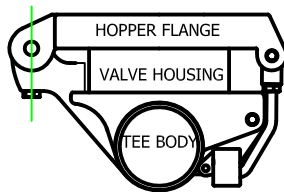

PROPER ADJUSTMENT

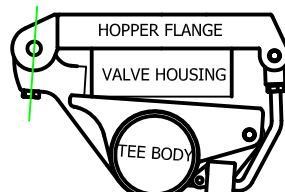

HINGE ADJUSTMENT TO TIGHT
 OR CAM HOOK TO LOOSE

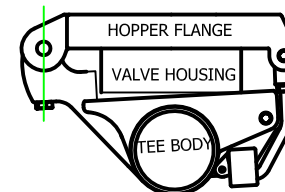

HINGE ADJUSTMENT TO LOOSE